


Keystone Jack Installing Instruction

KJ8 series

1

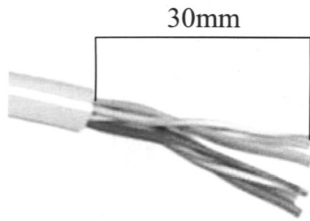

Strip approximately 30mm of the cable jacket, and separate to 4 pair each.

2


T568A

- Pin 5 White/Blue
- Pin 4 Blue
- Pin 1 White/Green
- Pin 2 Green
- Pin 3 White/Orange
- Pin 6 Orange
- Pin 7 White/Brown
- Pin 8 Brown

T568B

- Pin 5 White/Blue
- Pin 4 Blue
- Pin 1 White/Orange
- Pin 2 Orange
- Pin 3 White/Green
- Pin 6 Green
- Pin 7 White/Brown
- Pin 8 Brown


3

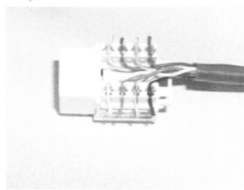

Follow the direction on the color-coding sticker to position T568A or T568B wiring, separate a little space on proper position and insert the wire pair by pair into each slot.


Unshielded type

4

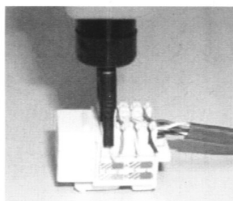


Use 110 or KRONE impact tool to press and cut off each conductor.

5

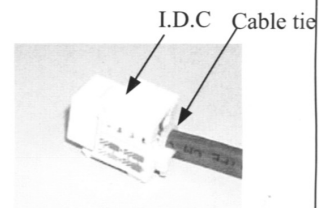

Insert the IDC cap to fix these wires.
Insert the cable tie to tight up the cable jacket and complete the installation.

3

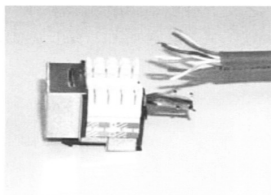

Slide the cable jacket into Cable Holder.


Shielded type

4




Follow the direction on the color coding sticker to position T568A or T568B wiring, separate a little space on proper position and insert the wire pair by pair into each slot.
Use 110 or KRONE impact tool to press and cut off each conductor.

5

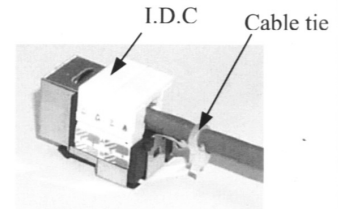


Insert the cable tie to tight up the cable jacket.
Insert the IDC cap to fix these wires.

6

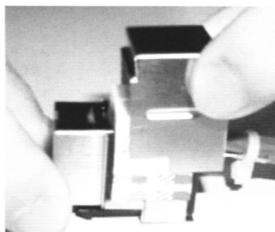

Cover the Full shield, then complete the installation.

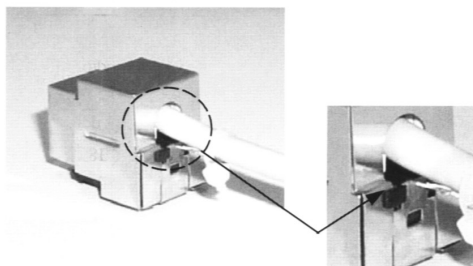

(Note: Full shield has to insert into this plastic slot)